



- NOTES:**
 1. UNLESS OTHERWISE SPECIFIED, ALL RESISTORS ARE IN OHMS 10% 1/2 WATT
 2. ALL CAPACITORS ARE IN UF (SEE PARTS LIST FOR VOLTAGE RATING)
 3. OPERATION SWITCH (S4) IS SHOWN IN OFF (FULL CCW) POSITION
 4. FUNCTION SWITCH (S3) IS SHOWN IN CW (FULL CCW) POSITION
 5. BAND SELECTOR (S1) IS SHOWN IN 3.5 MC (FULL CCW) POSITION
 6. METER SWITCH (S2) IS SHOWN IN S/RFO (FULL CCW) POSITION
 7. RELAYS ARE SHOWN IN RECEIVE CONDITION
 8. RESISTANCE MAY VARY FROM VALUE SHOWN IF REPLACEMENT IS NECESSARY, USE SAME VALUE AS PART REMOVED.

METER SWITCH POSITIONS		FUNCTION SWITCH POSITIONS		OPERATION SWITCH POSITION	
1	R. S. UNITS	1	C. W.	1	OFF (POWER OFF)
2	T. R. F. O	2	T. TUNE	2	REC (RECEIVE)
3	T. AALC	3	R. S. UNITS	3	MOX (MANUAL XMIT PTT)
4	T. SCREEN MA	4	LSB	4	VOX (AUTOMATIC XMIT)
S2 SHOWN IN RFO/S		S3 SHOWN IN CW		S4 SHOWN IN OFF	

Figure 22. Model SR-2000 Transceiver Schematic Diagram.
 Receive data path logic and control. See color codes at top of schematic